

MODEL 6S20/21 MIYOTA

BATTERY : SR927SW

Only for 6S20
1/10 sec

Chronograph
Minute hand

Chronograph
second hand

Only for 6S20
Chronograph
Small second hand

 
Only for 6S21
Chronograph
Small second hand

Only for 6S20
Date

Button A
(Chronograph Start / Stop)

Second click
(Time setting)
Normal position

Button B
(Chronograph Reset)
Only for 6S21
Date

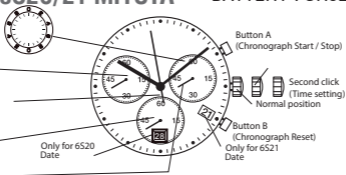

SETTING THE TIME/DATE

To set TIME – Pull the crown out to the 2nd Click Position.

Turn the crown clockwise to set hour and minute hands.

To set DATE – Pull the crown out to the 1st Click Position.

Turn the crown clockwise to set the date.

* If the date is set between the hours of around 9:00 PM and 1:00 AM, the date may not change on the following day.

After the date/time has been set, push the crown back to the Normal position.

USING THE CHRONOGRAPH

This chronograph is able to measure and display time in 1/4 second united up to maximum of 59min 59sec.

Measuring time with the stopwatch

1. Press button " A " to start the chronograph.
2. The chronograph can be started and stopped each time button "A" is pressed.
3. Press button "B" to reset the chronograph and chronograph minute and second hands return to their Zero positions.
4. Models 6S20/... have additional 1/10 second counter at 3 o'clock position. The small hand rotates only for the 1st minute of measuring.

CHRONOGRAPH RESET (INCL. AFTER REPLACING BATTERY)

This procedure should be performed when the chronograph second hand does not return to the Zero position.

1. Pull the crown out to the 2nd Click Position.
2. Press the button "A" once to set the chronograph second hand to the Zero position.
* The chronograph hand can be advanced rapidly by continuously pressing button "A".
3. Once the hands are set at Zero position, reset the time and return the crown to its normal position.